POROTHERM MORTAR ROLLER USER GUIDE

9./ Divider/s

2./ Handle

1./ Housing

6./ Gaudier

5./ Wheels

7./ Indicator arrow

8./ Roller mechanism

3./ Applicator roller

4./ Applicator handle
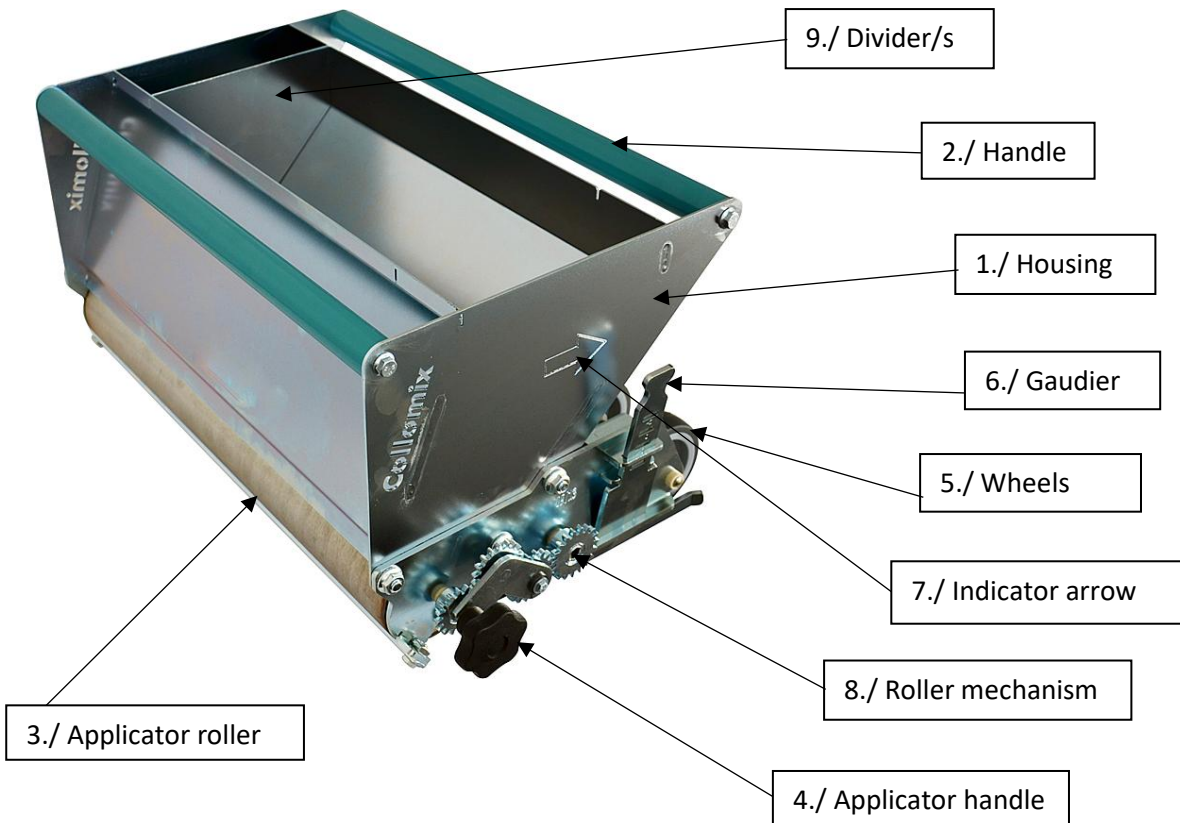
Different sizes of roller available: 240mm, 365mm, 425mm. All size of Collomix roller has divider inside. These are adjustable for your block size. If there is any problem, please give us a ring on 087 451 32 78 or 087 774 5465 numbers.

Instruction for all type of rollers:

1./ Make sure before you start, the roller is clean.

2./ Place the roller on the top of the blocks and make sure it is moving freely. The wheels (5) should spin the applicator (3) through the mechanism (8).

3./ Setup the divider (9) according to the block size.

4./ Spray with mould realiser oil completely. This will help to clean the roller afterwards, also will give smoother flow for the mortar.

5./ Pour the mortar mix into the roller. (For instruction please see "mixing Porotherm mortar")

6./ Turn the black applicator handle (4) to start the mortar flow to the blocks. This need to be done only if there is no mortar on the roller.

7./ Start to pull the roller according to the arrow (7) on the side of the housing.

8./ You can leave the roller at the end of the row and lift it later.

9./ The result should be 1mm thin mortar bed.

The best of luck with your build

Clayblock Ireland